



Installation Instructions : 377100 Discovery 3 & Rangerover Sport


To install towing System

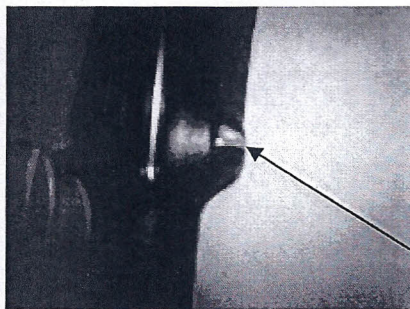

Make sure the pin at the back of the towing system is in the open stage

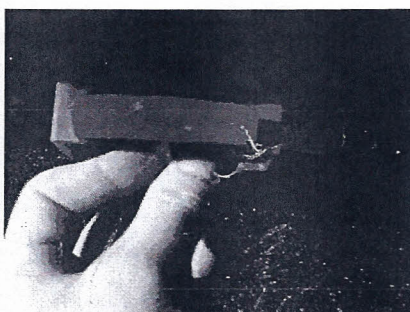


Remove plastic cover from housing

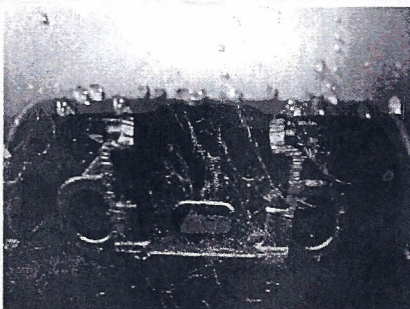

Housing is now ready for towing system to be inserted




Insert towing system into housing until it locks into place

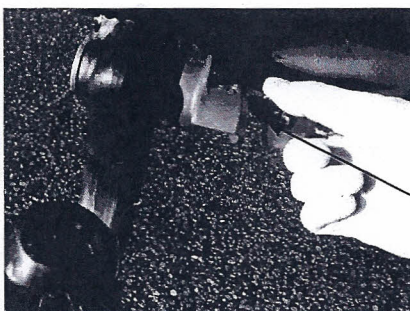


Turn the key Anticlockwise to lock in place and remove key


To remove towbar from vehicle

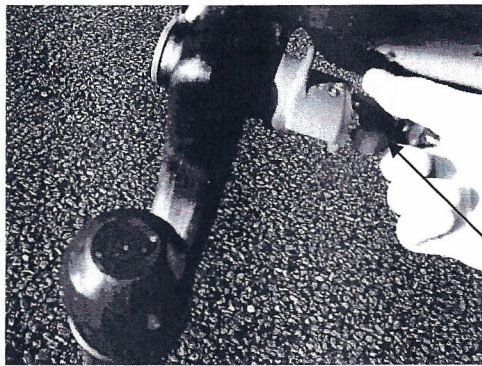


Turn key clockwise to unlock System

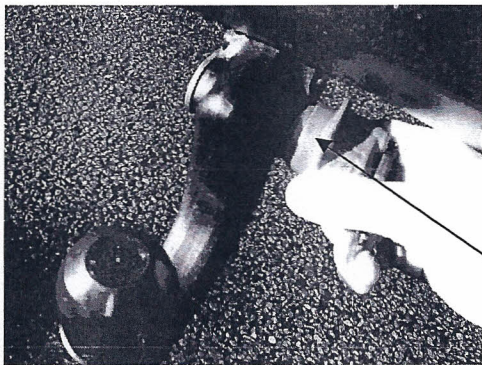

Pull out **SLACK** handle and turn anticlockwise to release

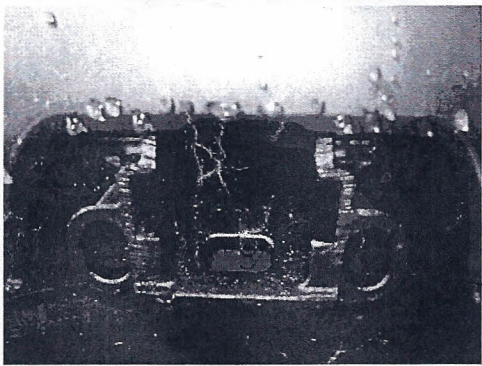

Housing is now clear for cover

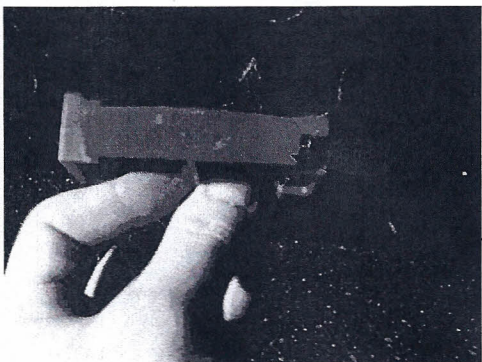

Push the red plastic cover Back into the housing

Place towing System in a safe place in vehicle